



# BC45R

## HIGH-PERFORMANCE MOUNTAIN BICYCLE LIGHT

**3300 LUMENS MAX OUTPUT**

**286 METERS MAX BEAM DISTANCE**

### WARNING

- Do NOT place this bicycle light in the reach of children!
- Do NOT shine this bicycle light directly into the eyes of anyone!
- Do NOT place light heat near flammable objects, high temperatures can cause objects to overheat and become flammable/ignite!
- Do NOT use this bicycle light in inappropriate ways such as holding the unit in your mouth, doing so could cause serious personal injury or death if this bicycle light or internal batteries fail.
- This bicycle light will accumulate a significant amount of heat while operating, resulting in a high temperature of the light shell. Pay close attention to avoid burns!
- Turn off and lock the bicycle light or remove the batteries to prevent accidental activation when the bicycle light is placed in a closed and flammable environment such as pockets and backpacks.
- The light sources of this bicycle light are not replaceable; so the whole light will need to be replaced when any one of the light sources reaches the end of its lifespan!

### (ENGLISH)FENIX BC45R BICYCLE LIGHT

- 3300 lumens maximum output, 286 meters maximum beam distance.
- Utilizes one SFT-40 cold white LED and four SST12 cold white LEDs; with a lifespan of 50,000 hours each.
- Powered by two included 18650-3400mAh batteries, batteries can be replaced.
- High beam and low beam can be controlled independently or in combination via switches on the wireless remote and bicycle light.
- OLED display clearly indicates the battery level, charging status, brightness level, mode, and other information.
- Inter waterproof USB Type-C charging port.
- IP68-rated protection and 1.5 meters impact resistance.
- Made of durable A6061-T6 aluminum alloy.
- Quick-release mount, easy to assemble and disassemble.
- Size: 4.92" x 1.97" x 1.46"/125 x 50 x 37 mm.
- Weight: 10.58oz/300g (including batteries).


### OPERATING INSTRUCTIONS FOR THE BICYCLE LIGHT

- Switches**
- High beam switch
  - Low beam switch
- The high beam switch controls the High beam mode. The low beam switch controls the Low beam mode.
- ON/OFF**
- Press and hold the high beam switch for over 0.5 seconds to turn on/off the High beam mode. Press and hold the low beam switch for over 0.5 seconds to turn on/off the Low beam mode.
- Output Selection**
- In High beam mode, single click the high beam switch to cycle through Low→Med→High.
  - In Low beam mode, single click the low beam switch to cycle through Eco→Low→Med→High.
- Lockout Function**
- With the light turned off and unlocked, double click either switch on the bicycle light within 0.5 seconds, the light will blink twice in Eco output of Low beam mode to indicate locked status.
  - Unlock: With the light locked, double click either switch on the bicycle light within 0.5 seconds, the light will enter the selected mode at its lowest output level to indicate that the light is unlocked.


### OPERATING INSTRUCTIONS FOR THE WIRELESS REMOTE

- Switches**
- High beam switch
  - Low beam switch
  - Functional switch
- The high beam switch controls the High beam mode. The low beam switch controls the Low beam mode. The functional switch controls the Special mode.
- Connecting with BC45R**
- Press and hold either switch on the bicycle light for 5 seconds, and the OLED display will show "Connecting".
  - Single click any switch on the wireless remote, and the OLED display will show "Pair?".
  - Single click either switch on the bicycle light, and the OLED display will show "Connected" to indicate that pairing is complete. Once paired, the wireless remote will automatically memorize the paired status. No re-pairing is required.



### ① Bicycle Light Switches

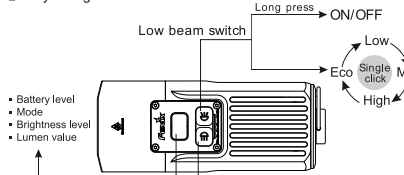


### ② Wireless Remote Switches

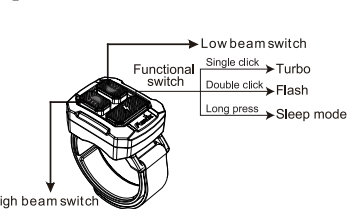


### ③ OLED Display

  

### ④ Battery Replacement

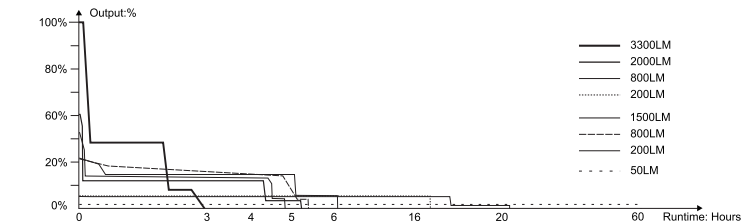

### ⑤ Mounting

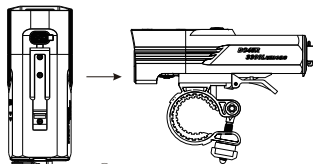

### TECHNICAL PARAMETERS

	HIGH BEAM MODE			LOW BEAM MODE			SPECIAL MODE		
	HIGH	MED	LOW	HIGH	MED	LOW	ECO	TURBO	FLASH
<b>OUTPUT</b>	2000 lumens	800 lumens	200 lumens	1000 lumens	800 lumens	200 lumens	50 lumens	3300 lumens	800-100 lumens
<b>RUNTIME</b>	5 hours 15 minutes	6 hours 15 minutes	18 hours 45 minutes	5 hours 30 minutes	6 hours 15 minutes	20 hours 15 minutes	59 hours 9 minutes	3 hours*	/
<b>DISTANCE</b>	269 meters	174 meters	85 meters	142 meters	102 meters	50 meters	25 meters	286 meters	/
<b>INTENSITY</b>	18211 candela	7651 candela	1820 candela	5049 candela	2617 candela	629 candela	157 candela	20486 candela	/
<b>IMPACT RESISTANCE</b>	1.5 meters						IP66		
<b>WATERPROOF</b>	IP66								

Note: The above specifications are from the results produced by Fenix through its laboratory testing using two Fenix ARB-L18-3400 batteries under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery usage.

\*The Turbo output is measured in total of runtime including output at reduced levels due to temperature or protection mechanism in the design.

The initial pairing process must be completed within 60 seconds, or it will cancel automatically.

#### Output Selection

- With the light turned on, single click the high beam switch to cycle through Low→Med→High.
  - With the light turned on, single click the low beam switch to cycle through Eco→Low→Med→High.
  - With the light turned on, single click the functional switch to enter Turbo; double click the functional switch to enter Flash. Single click any switch except for the functional switch to exit Special mode and return to the previously used output level.
- \*If the battery is low while Turbo is on, it will light up with the highest brightness supported by the current battery level.

#### Step Mode

- Enter: With the light turned on, press and hold the functional switch for over 1.5 seconds, the bicycle light will go out, enter Sleep mode, and show "SLEEP" on the OLED display. Single click any switch on the wireless remote of the bicycle light to wake up the bicycle light and enter the selected mode.
- Exit: Turn off the bicycle light with either switch on the bicycle light to exit Sleep mode. The bicycle light will automatically exit Sleep mode if no operation is detected for two hours.

#### OLED Display

- Turn on the bicycle light to activate the OLED display, which will remain constantly on to show the current brightness level, mode, and battery level.
- If only one battery is inserted, the OLED display will show "1/2".
- If the battery level is lower than 10%, the battery icon on the OLED display will blink to remind users to replace or recharge the batteries in a timely manner. Meanwhile, all brightness levels of the High beam mode are limited to 200 lumens, while those of the Low beam mode are limited to 50 lumens.

The bicycle light automatically memorizes the previously used output excluding Flash and Turbo. When turned on again, the previously selected output will be recalled.

### BATTERY SPECIFICATIONS

Type	Dimensions	Nominal Voltage	Usability
Fenix ARB-L18 Series	18650	3.6 V	Recommended ✓✓
Rechargeable Battery (Li-Ion)	18650	3.6/3.7 V	Caution* !
Rechargeable Battery (LiFePO <sub>4</sub> )	18650	3.2 V	Banned ✗

- Do not mix batteries of different types or ages. Doing so may cause damage to the bicycle light or the batteries being used.
- 18650 Li-ion batteries are powerful cells designed for commercial applications and must be treated with caution and handled with care. Using low-quality batteries or mischarging batteries (such as short-circuiting or overheating) could lead to combustion and jeopardize the safety of users and property. Any adverse effects resulting from the use of low-quality batteries are not covered by any Fenix warranty or liability. Using quality batteries with circuit protection will reduce the potential for combustion or explosion.

### BATTERY REPLACEMENT

#### Bicycle Light

- Rotate the tail cap button according to the direction of the "OPEN" logo, and pull out of the battery case.
- Insert the batteries according to the polarity marks of the battery case.
- Insert the battery case into the light body, and after the battery case is flush with the light body, rotate the tail cap button in the opposite direction of the "OPEN" logo.

#### Wireless Remote

- Insert the coin into the back of the wireless remote, rotate the coin counterclockwise to open the battery cover. Insert the battery, and tighten the back cover clockwise.
- Replace the CR1632 button battery every 3 months to maintain the optimum performance.

### CHARGING

- Turn off the bicycle light and open the anti-dust cover. Plug the USB Type-C end of the charging cable into the charging port of the bicycle light.
  - The OLED display will show "Charging" and then show "Full" once charging is completed and the charging cable is unplugged.
  - Once charging is completed, be sure to unplug the charging cable and close the anti-dust cover.
- Note:**
- The Eco, Low, and Med outputs of Low beam mode and the Low and Med outputs of High beam mode can be activated while charging, but the charging time will be prolonged.
  - Recharge a stored bicycle light every four months to maintain the optimum performance of the batteries.
  - With the light turned off, the normal charging time of the included Fenix ARB-L18-3400 batteries is approximately 3.5 hours from depleted to fully charged with a 9 V/2 A charging adapter.
  - The wireless remote cannot be operated while charging due to charging circuit protection.
  - Power specifications:
    - Charging voltage: 9 V
    - Charging power: 18 W (9 V/2 A)



FACEBOOK



WECHAT

"Follow" us for more information about Fenix.

### FENIXLIGHT LIMITED

Tel: +86-755-29631163/83/93 Fax: +86-755-29631181  
E-mail: info@fenixlight.com Web: www.fenixlight.com  
Address: 3F, Building A, 111 Shuiku Road, Bao'an District, Shenzhen 518102, China

FCC-ID: 2BVGH-BC45R (Bicycle light)

FCC-ID: 2BVGH-BC45RWR (Wireless remote)



61.149.221.174-A2-20260402

- This bicycle light supports fast charging.
- Only use a certified USB charging adapter that complies with the government safety standards of the country or region where this product is sold.
- Do not remove or install the batteries in reverse during charging.

### MOUNTING INSTRUCTIONS FOR THE BICYCLE LIGHT AND THE WIRELESS REMOTE

- Loosen the screw of the bicycle mount. Fix the bicycle mount in the desired position on the bike handlebar and tighten the screw.
  - Hold the light and slide it into the mount until a distinct "click" is heard.
  - Fasten the strap of the wireless remote to the desired position on the bike handlebar.
- Note:**
- Adjust the direction of the light before testing the power and functions of the bicycle light.
  - Use the shims provided according to the diameter of the bicycle's handlebars:
    - Thick only: diameter 28-29 mm.
    - Thin only: diameter 28-32 mm.
  - No shim required: diameter 32-35 mm.

### INTELLIGENT OVERHEAT PROTECTION

The bicycle light will accumulate a lot of heat when used at high output levels for extended periods. When the bicycle light reaches a temperature of 55°C(131°F) or above, it will automatically step down a few lumens to reduce the temperature. When the temperature drops below 50°C(122°F), the bicycle light will gradually recall the preset output level.

### LOW-VOLTAGE WARNING

- When the voltage level drops below the preset level, the bicycle light is programmed to downshift to a lower brightness level until Eco output is reached. When this happens in Eco output, the battery icon on the OLED display will blink to remind users to replace or recharge the batteries in a timely manner. To ensure normal use, the bicycle light will not turn off automatically, and the battery icon on the OLED display will keep blinking till the battery runs out.
- \*This only works with a Fenix ARB-L18 Series battery.

### USAGE AND MAINTENANCE

- Disassembling the sealed head can cause damage to the bicycle light and void the warranty.
- Replace or recharge the batteries in time to ensure normal use for next time.
- Fenix recommends using excellent quality batteries.
- If the bicycle light will not be used for an extended period, remove the batteries, or the bicycle light could be damaged by electrolyte leakage.
- Recharge a stored bicycle light every three months to maintain the optimum performance of the batteries.
- Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.
- Periodic cleaning of the bicycle light and battery contacts improves the bicycle's performance as dirty contacts may cause the bicycle light to flicker, shine intermittently, or even fail to illuminate for the following reasons:
  - A. Poor battery level.
  - Solution: Recharge or replace the batteries.
  - B. The contact or contact point of the battery and bicycle light is dirty.
  - Solution: Clean the contact points with a cotton swab soaked in rubbing alcohol. If the above methods don't work, please contact the distributor.

### INCLUDED

Fenix BC45R bicycle light, Bicycle mount, Bicycle mounting shim (thin/thick), Wireless remote, CR1632 battery, 2 x ARB-L18-3400 batteries, USB Type-C charging cable, Spare O-ring, User manual, Warranty card