

FENIX™**FENIX™**

Fenix E25

Fenix E25 is a compact, versatile outdoor flashlight. The All-function switch on the head gives you total control of the light. Activating the light or choosing an ideal output is simple and intuitive. Powered by 2 readily available AA batteries, E25 delivers a max 187-lumen output and 16 hours runtime on low mode. Featuring constant brightness technology and waterproof to IPX-8 standard, E25 is another high-performance addition to the growing Fenix product line.

E25

Max 187 Lumens

User manual*Illuminate Your Adventure*

Technical Parameters

ANSI NEMA FL1	High	Mid	Low	
OUTPUT	187 Lumens	90 Lumens	27 Lumens	
RUNTIME	Ni-MH Battery	2h 20min	6h 15min	26h
	Alkaline Battery	1h 15min	4h	16h
DISTANCE	156m(Max)			
INTENSITY	6112cd(Max)			
IMPACT RESISTANT	1 m			
WATERPROOF	IPX-8, underwater 2m			
ACCESSORIES	Lanyard and spare O-ring			

- Cree XP-E LED with a lifespan of 50,000 hours
- Uses two AA batteries
- 146mm (Length) x 24mm (Diameter)
- 75-gram weight (excluding batteries)
- Digitally regulated output - maintains constant brightness
- Reverse polarity protection guards against improper battery installation
- Slip-resistant body design
- All-function switch, simple and convenient operation
- Capable of standing up securely on a flat surface to serve as a candle
- Made of durable aircraft-grade aluminum
- Premium Type III hard-anodized anti-abrasive finish
- Toughened ultra-clear glass lens with anti-reflective coating

Note: The above-mentioned parameters (lab tested by Fenix using 2500mAh Ni-MH battery and the included Alkaline battery) are approximate and may vary between lights, batteries and environments.

Operation Instruction

Press and hold the switch for 0.5 seconds to turn the light on or off.

With the light on, a single press on the switch will select the brightness level in the order of Low→Mid→High.

The flashlight memorizes the last brightness used in general mode even after changing the batteries (it will not remember any flashing modes). The next time you turn on the flashlight, it will light up at the last used general mode.

Battery Specifications

Type	Dimension	Nominal Voltage	Usability	
Ni-MH Battery	AA	1.2V	Recommended	✓
Alkaline Battery	AA	1.5V	Usable	✓
Non-rechargeable Battery (Others)	AA	1.5V	Usable	✓
Rechargeable Battery (Li-ion)	14500	3.7V	Banned	✗

Warning: Please do not mix batteries of different brands, size, capacity or type. Doing so may cause damage to the flashlight or the batteries being used.

Battery Replacement

Unscrew the light head to insert the batteries with the anode side (+) toward the light head, screw the light head back on.

Usage and Maintenance

○ Please don't disassemble the sealed, as doing so can cause damage to the flashlight and will void the warranty.

Product Registration

We kindly suggest that you register your product on the official website of Fenixlight Limited (www.fenixlight.com). You'll receive an extra six months of warranty coverage once you have successfully registered. By participating in an optional customer survey, you are entered in a drawing for free Fenix products.

Warning

E25 is a high-intensity lighting device capable of causing eye damage. Avoid shining the light directly into the eyes.

○ Use only recommended high performance batteries with this high discharge light: A Ni-MH rechargeable cell is recommended as alkaline batteries will reduce the flashlight's runtime.

○ We recommend the use of high quality battery. If the flashlight is not to be used for an extended period, remove the battery, or the flashlight could be damaged by electrolyte leakage or battery explosion.

○ Unscrew the tail cap one-half turn or take out the battery to prevent accidental activation during storage or transport.

○ The O-ring may be worn out after using for a long time. If it happens, please replace the O-ring with a new one to keep the flashlight properly sealed against water.

○ Please clean the contacts of your light from time to time, especially if the light flickers or doesn't light up. There may be several reasons for a flickering or not working light:

Reason A: The batteries need replacing.

Solution: Replace the batteries (Please confirm the correct installation of anode and cathode).

Reason B: The threads, PCB board contact or other contacts are dirty.

Solution: Clean the contact points with an alcohol soaked cotton swab.

If the above methods don't work, please contact the distributors and refer to the warranty policy.

Product Warranty

We will replace products afflicted with manufacturing defects within 15 days of purchase and repair a light free of charge within 24 months of purchase if problems develop with normal use; if repair is required after 24 months from the date of purchase, we will charge for parts. The total repair fee is dictated by the cost of the replaced materials.