









# **⚠** WARNING

ODo NOT place this flashlight in the reach of children!
ODo NOT shine the flashlight directly into the eyes of anyone!
ODo NOT place light head near flammable objects, high temperatures can cause objects to overheat and become flammable/ignite!

This flashlight will accumulate a significant amount of heat while operating, sulting in a high temperature of the light shell. Pay close attention to avoid

birms. " ©Turn off and lock the flashlight or remove the battery to prevent accidental activation when the light is placed in a closed and flammable environment such as

activation when the light is placed in a closed and flammable environment such as pockets and backpacks!

Othe LEDs of this flashlight ETs reaches the end of its lifespan.

#### (ENGLISH)FENIX LD36R FLASHLIGHT

O 3600 lumens maximum output, 385 meters maximum beam distance.
OUtlitizes three Luminus SF12SR Gen2 LEDs and three high-performance RGB
LEDs, with a literapor of 50,000 hours each.
O'Powered by an include Frank ARB-L21-4000 battery.
In mode provides multiple almospheric lighting effects for creating unique wibes.

Unique wheel.

OS Stopless colorful light mode enables users to select their preferred light color to meet individual lighting needs with a single electronic switch.

O'X inch threaded socket at the tail allows the light to be securely mounted on a O'Included diffuser tip converts the tail allows the light to be securely mounted on a O'Included diffuser tip converts the flashlight into a reading or atmosphere light for more application scenarios.

O'Reverse polarity protection, to protect from improper battery insertion.

O'Reverse polarity protection, to protect from improper battery insertion.

O'Stace 5.50° x 1.50° x 1.00° x 1.

#### OPERATING INSTRUCTIONS

# On/Off On:

When the toggle switch is set to  $\pmb{\phi}$  , turn the toggle switch to  $\pmb{w}$  or  $\pmb{c}$  to turn on the flashlight.

flashlight. When the toggle switch is set to  $\mathbf{W}$  or  $\mathbf{C}$  and the flashlight is turned off, press and hold the electronic switch for 0.5 seconds to turn on the flashlight.

With the light turned on, turn the toggle switch to  $\mathbf{C}$  or press and hold the electronic switch for  $\mathbf{C}$ 5 seconds to turn of the light.

switch for 0.5 seconds to turn off the light.

Mode Switching
In any state, turn the toggle switch to select the needed mode. W indicates the
White light mode, and C indicates the Colorful light mode or Colorful breathing
light mode.

When the toggle switch is set to W, press and hold the electronic switch for 1.2
seconds to enter the Strobe mode, single click it again to recall the previously
When the toggle switch is set to C, press and hold the electronic switch for 1.2
seconds to enter the Stepless colorful light mode. Continue holding the electronic
switch until your desired light color appears. Once it appears, release the
electronic switch to lock in that color. If you want to change the light color, press

ANSI/PLATO FL1

₩ OUTPUT

( RUNTIME

DISTANCE

INTENSITY

✓ IMPACT RESISTANCE

and hold the electronic switch again until the new color appears, then release it to lock in the new color. Single click the electronic switch to recall the previously used output of the Colorful light mode or the Colorful breathing light needed: in Colorful light mode or Slepless colorful light mode, double click the electronic switch within 0.5 seconds to enter the Colorful breathing light mode. Single click the electronic switch to recall the previously used output of the Colorful light mode Output Selection.

TURBO

MED

3 hours 3 hours 10 hours 28 hours 41 minutes\* 55 minutes 15 minutes 58 minutes

37100 candela 14900 candela 3400 candela 1450 cand

350 lumens

HIGH

385 meters 244 meters 117 meters

3600 lumens 1500 lumens

LOW

150 lumens

76 meters

ECO

30 lumens

In White light mode, single click the electronic switch to cycle through Eco→Low
→Med→High→Turbo.

—Med—High—Turbo eingle click the electronic switch to cycle through Sunrise In Colorful light mode, single click the electronic switch to cycle through Sunrise Intelligent Memory Circuit
The flashight memorzes the previously used output level and mode, excluding Strobe and Stepless colorful light. When turned on again, the previously used output level and mode will be recalled. Lock/Unlock

With the light turned off, double click the electronic switch within 0.5 seconds to lock the light, the light will blink twice on the Eco output to indicate the locked status.

Unlock:
With the light locked, turn the toggle switch to W or C, then double click the electronic switch within 0.5 seconds, the light will activate on the Eco output of the White light mode, the previously used output of the Colorful breathing light mode to indicate the light is unlocked.

Colorful breathing light in mode to indicate the light is unlocked.

The colorful breathing light is mode to the color of the colorful color of the colorful color of the color of th

#### BATTERY SPECIFICATIONS Type Dimensions Nominal Usability 21700 21700 Fenix ARB-L21 Series Rechargeable Battery(Li-ion) without protection board 21700 3.6 V Banned

\*21700 Li-ion batteries are powerful cells designed for commercial applications and must be treated with

#### 35 meters 39 meters 23 meters 32 meters 27 meters 27 meters 23 meters 300 candela 300 candela 200 candela ture of 21+3°C and humidit of 50% - 80%. The true performance of this product may vary according to different working env

165 lumens 250 lumens 210 lumens

COLORFUL LIGHT

ARCTIC GREEN | NEON PURPLE | AQUA BLUE | TWILIGHT PINK | SUNSET ORANGE | SUNRISE RED

LATO FL1 standard, the above specifications are from the results produced by Fe

quality batteries or mishandling batteries (such as short-circuiting nd jeopardize the safety of users and property. Any adverse effects es are not covered by any Fenix warranty or liability. Using quality the notestical for combustion or contains.

TECHNICAL PARAMETERS

330 lumens

### BATTERY REPLACEMENT

STROBE

3600 lumens

Unscrew the light body and insert the battery with the anode side (+) towards the light head, then screw the light body back on.

## CHARGING

Turn off the flashlight and open the anti-dust cover to reveal the USB Type-C harging port, then connect the USB Type-C end of the charging cable to the light The indicator will display red while charging and will turn green when fully harged. 3. Once charging is completed, be sure to unplug the charging cable and close the anti-dust cover.

total:
The normal charging time of the included Feinix ABB-121-6000 battery is approximately 3.5 hours from epithed to fully charged with a 5 V/2.5 A charging adapter.
Recharge a stored makinglish every four momits to maintain the optimum performance of the battery.
When charging, all moders can be turned on, excluding Tutto, Strobe, and Colorful breathing light, ownever, the brightness levels may vary based on different charging statuses and battery levels.

BATTERY LEVEL INDICATION

With the light turned off, single click the electronic switch to check the battery status, the indicator will last for 3 seconds. Each time the light is turned on, the indicator will show the current battery level and will last for 3 seconds. Green light on saturated 100% - 85% Green light on saturated 100% - 85% Red light on; poor 50% - 25% Red light on; poor 50% - 25% Red light not; poor 50% - 1% Indicator is set to see the saturated of the second light flashes, critical 25% - 1%

#### INTELLIGENT OVERHEAT PROTECTION

The flashlight will accumulate a lot of heat when used at high output levels for

175 lumens

### LOW-VOLTAGE WARNING

215 lumens

When the voltage level drops below the preset level, the flashlight is programmed to downshift to a lower brightness level until Eco output is reached. When this happens in Eco output, the battery level indicator blinks red to remind users to replace or recharge the battery in a timely manner.

USAGE AND MAINTENANCE

# ©Disassembling the sealed head can cause damage to the flashlight and will void the warranty.

the warranty.

OF Fanix recommends using an excellent quality battery.

Off the flashight will not be used for an extended period, remove the battery, or the light could be damaged by electrotyle leakage.

OLock the light or remove the battery to prevent accidental activation during storage or transportation.

OLong-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spere.

OPeriodic cleaning of the light and battery contacts improves the light's performance as diffy contacts may cause the lamp to flicker, shine intermittently or even fall to illuminate for the following reasons:

A: Poor battery level. performance or even fail to illuminate us use...
A: Poor battery level.
Solution: Recharge or replace the battery.
B: The contact or contact point of the battery or flashlight is dirty.
B: The contact or contact point of the battery or flashlight is dirty.
Solution: Clean the contact points with a cotton swab scaked in rubbing alcohol.

" the above methods don't work, please contact the distributor.

Fenix LD36R flashlight, ARB-L21-6000 battery, USB Type-C charging cable, AOD-04 diffuser tip, Holster, Lanvard, Spare O-ring, User manual, Warranty card