

FENIX™**FENIX™**

Fenix PD22 Flashlight


Fenix PD22 is a small-footprint flashlight with wide-ranging functionality. Four brightness levels and two flashing modes, along with a side mode switch, provide total lighting control. Compact, lightweight and waterproof to IPX-8 standard, PD22 is an excellent choice for your outdoor illumination or every day carry.

PD22

Max 210 Lumens

User manual

Illuminate Your Adventure

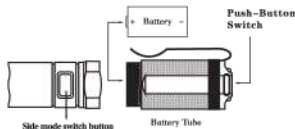

Technical Parameters

ANSI/NEMA FL1	General Mode				Strobe	SOS
	Turbo	High	Mid	Low		
OUTPUT	210 Lumens	105 Lumens	45 Lumens	3 Lumens	210 Lumens	105 Lumens
RUNTIME	2h	5h	12h 30min	120h		
DISTANCE	113m (Max)					
INTENSITY	3200cd (Max)					
IMPACT RESISTANT	1m					
WATERPROOF	IPX-8, underwater 2m					
ACCESSORIES	Holster, Body clip, Lanyard and Spare O-ring					

- Cree XP-G2 (R5) LED with a lifespan of 50,000 hours
- Uses one 3V CR123A battery
- 89mm (Length) x 21.5mm (Diameter)
- 44-gram weight (excluding battery)
- Digitally regulated output - maintains constant brightness
- Reverse polarity protection, to protect from improper battery installation
- Anti-roll, slip-resistant body design
- Tactical tail cap switch with momentary-on function
- Side mode switch button in the front, a single press for output selection
- Made of durable aircraft-grade aluminum
- Premium Type III hard-anodized anti-abrasive finish
- Toughened ultra-clear glass lens with anti-reflective coating

Notice: The above-mentioned parameters (Lab tested by Fenix using quality CR123A lithium batteries) are approximate and may vary between flashlights, batteries and environments.

Operation Instruction

Turning on/off

Press the tail cap switch lightly to activate the flashlight momentarily. Press the tail cap switch completely to turn on the flashlight and lock it. Another press can turn it off.

Mode selection

A single press on the side mode switch button can select in the cycle of Turbo~Low~Mid~High brightness level;

Press and hold the side mode switch button for about one second to enter into the Strobe.

Press and hold the side mode switch button for about three seconds to enter into the SOS.

Under the condition of Strobe or SOS, a single press on the side mode switch button can return to the general mode.

The flashlight will remember the last used general mode (it will not remember any flashing modes). So next time you turn on the flashlight, it will light up at the last used general mode.

Battery Specifications

Type	Dimensions	Nominal Voltage	Usability	
Non-rechargeable Battery (Li-Iron)	CR123A	3V	Recommended	✓
Rechargeable Battery (Li-Iron)	16340	3.7V	Banned	✗
Rechargeable Battery (Li-FePO ₄)	16340	3.2V	Banned	✗

Note: Using the banned battery will probably cause damage to the flashlight.

Battery Replacement

Unscrew the light head to put in the battery with the anode side (+) toward the light head, screw the light head back on .

Usage and Maintenance

○ Please don't disassemble the sealed head, as doing so can cause damage to the flashlight and will void the warranty.

○ We recommend the use of high quality batteries. If the flashlight is not to be used for an extended period, remove the batteries, or the flashlight could be damaged by electrolyte leakage or battery explosion.

○ Unscrew the tail cap one-half turn or take out the battery to prevent accidental activation during storage or transport.

○ The O-ring may be worn out after using for a long time. If it happens, please replace the O-ring with a new one to keep the flashlight properly sealed against water.

○ Please clean the contacts of your light from time to time, especially if the light flickers or doesn't light up. There may be several reasons for a flickering or not working light:

Reason A: The battery needs replacing.

Solution: Replace the battery (Please confirm the correct installation of anode and cathode).

Reason B: The threads, PCB board contact or other contacts are dirty.

Solution: Clean the contact points with an alcohol soaked cotton swab.

If the above methods don't work, please contact the distributors and refer to the warranty policy.

Product Warranty

We will replace products afflicted with manufacturing defects within 15 days of purchase and repair a light free of charge within 24 months of purchase if problems develop with normal use; if repair is required after 24 months from the date of purchase, we will charge for parts. The total repair fee is dictated by the cost of the replaced materials.

Product Registration

We kindly suggest that you register your product on the official website of Fenixlight Limited (www.fenixlight.com). You'll receive an extra six months of warranty coverage once you have successfully registered. By participating in an optional customer survey, you are entered in a drawing for free Fenix products.

Warning

PD22 is a high-intensity lighting device capable of causing eye damage. Avoid shining the light directly into the eyes.