



PD36R V2.0

**COMPACT
RECHARGEABLE
TACTICAL FLASHLIGHT**



**1700 LUMENS MAXIMUM
OUTPUT**



**396 METERS MAXIMUM
BEAM DISTANCE**

WARNING

- DO place this flashlight out of the reach of children!
- Do NOT shine the flashlight directly into the eyes of anyone!
- Do NOT place light head near flammable objects, high temperatures can cause objects to overheat and become flammable/ignite!
- Do NOT use the flashlight in inappropriate ways such as holding it under your mouth, doing so could cause serious personal injury or death if the flashlight or internal battery fails!
- This flashlight will accumulate a significant amount of heat while operating, resulting in a high temperature of the flashlight shell. Pay close attention to avoid burns.
- Unscrew the light body half a turn or remove the battery from the flashlight to prevent accidental activation when the flashlight is placed in a closed-in and flammable environment such as pockets and backpacks!
- The LED of this flashlight is not replaceable, so the whole flashlight will need to be replaced when the LED reaches the end of its lifespan.

(ENGLISH) FENIX PD36R V2.0 FLASHLIGHT

- 1700 lumens maximum output and 396 meters beam distance.
- Uses one Lumus SFT140 LED with a lifespan of 50,000 hours.
- Included is one Fenix ARB-L21-5000 V2.0 battery.
- The tactical tail switch controls the momentary and constant on/off functions.
- The neck-mounted side switch controls brightness selection.
- Two-way body clip for different lighting demands.
- The USB Type-C charging port supports up to 18 W fast charging.
- Made of durable A6061-T6 aluminum.
- Premium type HAIII hard-anodized anti-abrasive finish.
- Size: 5.54" x 1.04" x 1.00"/140.7 x 26.5 x 25.5 mm.
- Weight: 5.89 oz/167 g (including battery).

OPERATING INSTRUCTIONS

Switches



The tail switch is the tactical switch, and the side switch is the functional switch.

On/off

Tap the tactical switch to momentarily turn on the flashlight, release it and the light will go out.
Fully press the tactical switch to constantly turn on the light, press it once again to turn off the light.

Mode switching

With the light switched on, single click the functional switch to cycle through Turbo→Eco→Low→Med→High.

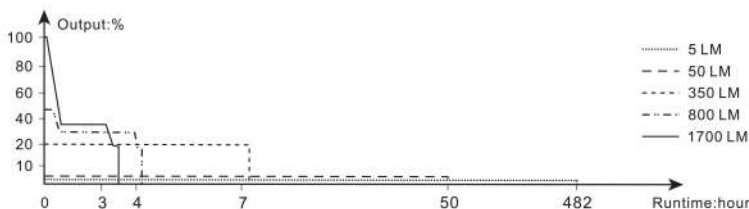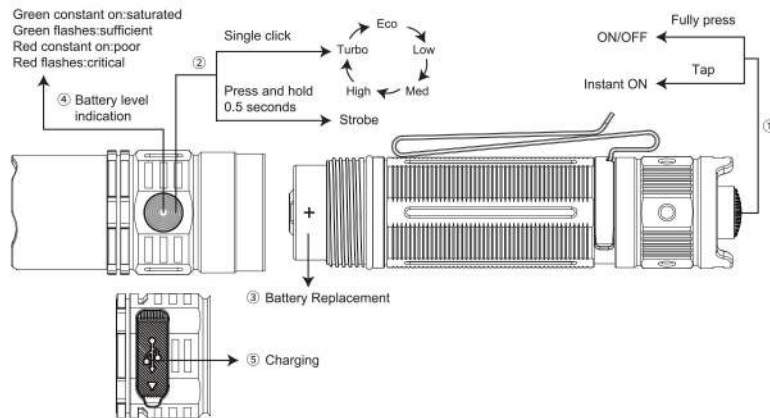

TECHNICAL PARAMETERS						
ANSI/NEMA FL1	TURBO	HIGH	MED	LOW	ECO	STROBE
OUTPUT	1700 lumens	800 lumens	350 lumens	50 lumens	5 lumens	1700 lumens
RUNTIME	3 hours 30 minutes*	4 hours 15 minutes	7 hours 45 minutes	50 hours	482 hours	/
DISTANCE	396 meters	268 meters	177 meters	67 meters	19 meters	/
INTENSITY	39240 candela	18016 candela	7809 candela	1107 candela	89 candela	/
IMPACT RESISTANCE	1 meter					
SUBMERSIBLE	IP68, 2 meters underwater					

Note: The above specifications are the test results produced by Fenix through its laboratory testing using the Fenix ARB-L21-5000 V2.0 battery under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery used.

*The Turbo output is measured in total of runtime including output at reduced levels due to the built-in temperature protection mechanism.

Strobe

With the light switched on, press and hold the functional switch for 0.5 seconds to enter strobe, click once again to return to General mode.

Intelligent Memory Circuit

The light remembers the last selected output excluding strobe. When turned on again the previously used output will be recalled.

BATTERY SPECIFICATIONS

Type	Dimensions	Nominal voltage	Usability
Fenix ARB-L21 Series	21700	3.6 V	Recommended ✓✓
Rechargeable Battery(Li-Ion)	21700	3.6 V	Caution* !
Rechargeable Battery(Li-Ion) without protection board	21700	3.6 V	Banned ✗

Warning: It is strictly prohibited to use the 18650, CR123A, or 16340 battery.
*21700 Li-Ion batteries are powerful cells designed for commercial applications and must be treated with caution and handled with care. Only using quality batteries with circuit protection will reduce the potential for combustion or explosion. Cell damage or short circuiting caused by using this type of battery is considered user induced damage and is not covered by any Fenix warranty or liability.

BATTERY REPLACEMENT

Unscrew the light body and insert the battery with the anode side (+) towards the light head, then screw the light body back on.

CHARGING

- Open the anti-dust cover to reveal the charging port, then connect the USB Type-C end of the charging cable to the flashlight.
- The indicator will display red while charging, and will turn to green when fully charged.
- Once charging is completed, be sure to close the anti-dust cover.

Note:
1. The normal charging time of the included Fenix ARB-L21-5000 V2.0 rechargeable battery is approximately 2.5 hours from depletion to fully charged with an 18 W or higher-power fast charging adapter.
2. Recharge a stored light every four months to maintain optimum performance of the battery.
3. Only Eco output can be operated while charging.
Note: These features only work with a Fenix ARB-L21 Series 21700 battery.

BATTERY LEVEL INDICATION

Each time the light is turned on, the battery level indicator will automatically display the battery status for 3 seconds.
Green light on: saturated 100% - 85%
Green light flashes: sufficient 85% - 50%
Red light on: poor 50% - 25%
Red light flashes: critical 25% - 1%
Note: This feature only works with a Fenix ARB-L21 Series 21700 battery.

INTELLIGENT OVERHEAT PROTECTION



FACEBOOK



WECHAT

"Follow" us for more information about Fenix.

FENIXLIGHT LIMITED

Tel: +86-755-29631163/83/93 Fax: +86-755-29631181

E-mail: info@fenixlight.com Web: www.fenixlight.com

Address: 2F/3F, West of Building A, Xinghong Technology Park, 111 Shuiku Road, Fenghuanggang Community, Xixiang Street, Bao'an District, Shenzhen City, Guangdong Province, China



61.149.221.090-A1-20230821

The flashlight will accumulate a lot of heat when used at high output levels for extended periods. When the light reaches a temperature of 60°C/140°F or above, the light will automatically step down a few lumens to reduce the temperature. When the temperature drops below 60°C/140°F, the light will gradually recall the standard output level.

LOW-VOLTAGE WARNING

When the voltage level drops below 3.0 V, the flashlight is programmed to downshift to a lower brightness level until Eco output is reached. When this happens in Eco output, the battery level indicator blinks red to remind you to replace or recharge the battery. To ensure normal use, the flashlight will not turn off automatically and will work till the battery level runs out.

Note: This feature only works with a Fenix ARB-L21 Series 21700 battery.

USAGE AND MAINTENANCE

- Disassembling the sealed head can cause damage to the light and will void the warranty.
- Fenix recommends using an excellent quality battery.
- The light will not be used for an extended period, remove the battery, or the light could be damaged by electrolyte leakage or battery explosion.
- Unscrew the light body half a turn or take out the battery to prevent accidental activation during storage or transportation.
- Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.
- Periodic cleaning of the battery contacts improves the lamp's performance as dirty contacts may cause the lamp to flicker, shine intermittently or even fail to illuminate for the following reasons:
A: Poor battery level.
Solution: Replace or recharge the battery (Ensure the battery is inserted according to the manufacturer's specifications).
B: The threads, PCB board contact or other contacts are dirty.
Solution: Clean the contact points with a cotton swab soaked in rubbing alcohol.
- If the above methods don't work, please contact your authorized distributor.

INCLUDED

Fenix PD36R V2.0 flashlight, ARB-L21-5000 V2.0 battery, USB Type-C charging cable, Holster, Lanyard, Spare O-ring, User manual, Warranty card