





(ENGLISH) FENIX TK20R V2.0 FLASHLIGHT

@ 3000 lumens maximum output: 475 meters maximum beam distance One Luminus SFT70 LED with a lifespan of 50,000 hours.

BEAM DISTANCE

- Included a Fenix ARB-L21-5000 V2.0 rechargeable Li-ion battery.
- Advanced Pulse-Frequency Transmission System (APF). O Instant activation and strobe with the dual tactical tail switches.
- Hidden USB Type-C charging port. O Internal dual-spring structure ensures stable lighting even under
- Made of durable A6061-T6 aluminum
- O Premium type HAIII hard-anodized anti-abrasive finish.
- O Size: 6.02" x 1.34" x 1.00" / 152 x 34 x 25.4 mm.
- Weight: 7.20 oz / 204 g (including battery).

OPERATING INSTRUCTION

Switches

The round tail switch is the tactical switch for instant activation. The oval tail switch is the functional switch for output selection and instant strobe.

Tap the tactical switch to silently and momentarily turn on the light, releasing the light will go out.

Fully press the tactical switch to constantly turn on the light, press again the light will go out.

With the light switched on, single click the functional switch to cycle through Eco→Low→Med→High→Turbo.

With the light switched on, press and hold the functional switch for 0.5 seconds to enter strobe, click the functional switch once again to turn back to the general mode.

With the light switched off, press the functional switch to enter strobe, release the light will go out. Intelligent Memory Circuit

The light memorizes the last selected output excluding strobe. When turned on again the previously used output of general mode will be recalled.

INTELLIGENT OVERHEAT PROTECTION The light will accumulate a lot of heat when used on Turbo output levels for extended periods. When the light reaches a temperature of 60°C or above, the light will automatically step down a few lumens to reduce the temperature. When the temperature drops below 60°C, it will then allow the user for the reselection of Turbo mode.

TECHNICAL PARAMETERS

シャた OUTPUT	3000 lumens	1000 lumens	:	350 lumens	150 lumens	30 lumens	3000 lumens
() RUNTIME	2 hours 50 minutes*	3 hours 10 minutes	Г	7 hours	21 hours 20 minutes	48 hours	1
■ DISTANCE	475 meters	265 meters		150 meters	100 meters	45 meters	1
INTENSITY	56600 candela	17620 candela	5	860 candela	2500 candela	490 candela	1
✓ IMPACT RESISTANCE				1 m	eter		
~¥~ SUBMERSIBLE				IP	68		
Note: According to the ANSI/PLATO FL	standard, the above spec	cifications are from the res	ults p	roduced by Fenix thr	rough its laboratory testing	using the included Fenix	ARB-L21-5000 V2.0 Li-ic

battery under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery used.

The Turbo output is measured in a total of runtime including output at reduced levels due to temperature or protection mechanism in the design.

BATTERY SPECIFICATIONS

Туре	Dimensions	Nominal Voltage	Usability	
Fenix ARB-L21-5000 V2.0	21700	3.6V	Recommended	4.
Fenix ARB-L21-5000U	21700	3.6V	Recommended	√.
Fenix ARB-L21-4000P	21700	3.6V	Recommended	4.

Battery level indication

* 21700 Li-ion batteries are powerful cells designed for commercial applications and must be treated with caution and handled with care. Only use quality batteries with circuit protection will reduce the potential for combustion or explosion; but cell damage or short circuiting are

BATTERY REPLACEMENT

ANSI/PLATO FL1

Unscrew the light tail and insert the battery with the anode side (+) towards the light head, then screw the light tail back on.

CHARGING

- Loosen the light head counterclockwise to reveal the USB Type-C charging port and plug the USB A socket of the charging cable into an electrical outlet, then connect the USB Type-C socket of the charging cable to the light
- 2. The indicator will display red while charging and will turn green when
- 3. Once charging is completed, be sure to tighten the light head to

maintain the dustproof and waterproof ability. Note:

1. When charging fails or the battery is reversely connected, the battery indicator will flash red to remind the user to check the battery.

OFF

Release Strobe

◆

- 2. The normal charging time of the included Fenix ARB-L21-5000 V2.0 is approximately 3.5 hours from depletion to full charging. 3. Recharge a stored light every four months to maintain the optimum performance of the battery
- 4. The light is unavailable while charging.
- Note: This only works with Fenix ARB-L21 series 21700 rechargeable Li-ion battery.

BATTERY LEVEL INDICATION

Each time the light is turned on, the indicator (unscrew the light head to see) will indicate the battery level and will last for 3 seconds.

Green light on: saturated 100% - 85% Green light flashes: sufficient 85% - 50%

Red light on: poor 50% - 25% Red light flashes; critical 25% - 1%

Note: This only works with Fenix ARB-L21 series 21700 rechargeable Li-ion battery.

LOW-VOLTAGE WARNING

When the voltage level drops below the preset level, the flashlight is programmed to downshift to a lower brightness level until Eco output is reached. When this happens in Eco output mode, the light blinks 3 times every 5 minutes to remind you to timely recharge or replace the battery

Note: This only works with Fenix ARB-L21 series 21700 rechargeable Li-ion battery

USAGE AND MAINTENANCE

- O Disassembling the sealed head can cause damage to the light and
- will void the warranty
- Fenix recommends using only a high-quality protected battery.
- O If the light will not be used for an extended period, remove the battery for proper storage.
- O Unscrew the tail cap or remove the battery to prevent accidental activation during storage or transportation.
- O Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.
- O Periodic cleaning of the battery contacts improves the light's
- performance as dirty contacts may cause the light to flicker, shine intermittently or even fail to illuminate for the following reasons:
- A: Poor battery level.
- Solution: Recharge or replace the battery.
- B: The contact or contact point of the battery or flashlight is dirty. Solution: Clean the contact points with a cotton swab soaked in rubbing
- If the above methods don't work, please contact your authorized distributor.

INCLUDED

Fenix TK20R V2.0 flashlight, ARB-L21-5000 V2.0 Li-ion battery, USB Type-C charging cable, Lanyard, Holster, 2 x Spare O-rings, User manual, Warranty card

∴WARNING

 $\hfill \bigcirc$ The flashlight is a high-intensity lighting device capable of causing eye damage to the user or others. Avoid shining the light directly into anyone's eyes.

- This flashlight will accumulate a lot of heat when used for extended periods, resulting in a high temperature of the flashlight shell. Pay
- attention to safe use to avoid scalding.
- On not shine an object at close range, to avoid burning the object or causing danger due to high temperature.
- O The LED of this flashlight is not replaceable; so the entire light should
- be replaced when the LED reaches the end of its life.
- O If any of the information provided in this manual is changed, the new version of the manual shall prevail; if your included user manual is an old one, it acquiesces that we won't send a new manual.