

FENIX



TK40
Max 630 Lumens

User manual

Fenix Flashlight
Illuminate Your Adventure






TK40 Flashlight

The Fenix TK40 flashlight delivers an amazing 630 lumens of brightness and throws an impressive 300m long beam, much brighter than a 10 watt HID light and similar in performance to a car spotlight. The TK40 is designed for outdoor search, cave exploration, or any activity that requires a reliable high output flashlight.

Unique in the flashlight industry for its combination of high quality and versatility, the TK40 fuses its outstanding performance with a perfect user interface, excellent ergonomics and light weight to make it the best handling flashlight in its class.

Moreover, with 4 levels of primary output, 4 strobe modes and an ability to run for 12 continuous nights, the TK40 has the versatility to meet many different lighting requirements, making it an indispensable illuminating tool for outdoor exploration, cross country vehicles, etc.

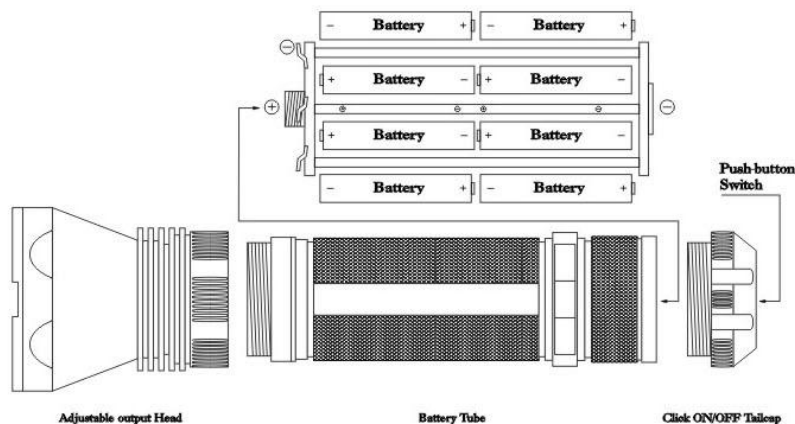

Features

- ◎ Cree MC-E LED with lifespan of 50,000 hours
- ◎ 2 modes with 8 types of output
 - 4 types of primary output:
 - Turbo (630 Lumens, 2Hrs)→Low (13 Lumens, 150Hrs)→
 - Mid (93 Lumens, 20Hrs)→High (277 Lumens, 6.8Hrs)
 - 4 types of strobe modes: Strobe, Slow flash, SOS, Fast flash
- ◎ Highly efficient textured reflector throws beam over 300m
- ◎ Digitally regulated output - maintains constant brightness
- ◎ Intelligent memory function
- ◎ Uses eight 1.5V AA(Alkaline, Ni-MH) batteries (Can use four batteries in an emergency)
- ◎ 208mm (Length)x62mm(diameter)
- ◎ 284-gram weight(excluding batteries)
- ◎ Made of durable aircraft-grade aluminum
- ◎ Premium Type III hard-anodized anti-abrasive finish
- ◎ Waterproof to IPX-8 Standard
- ◎ Toughened ultra-clear glass lens with anti-reflective coating
- ◎ Push-button tailcap switch
- ◎ Capable of standing up securely on a flat surface to serve as a candle
- ◎ Included accessories: shoulder strap, two spare o-rings, and a rubber switch boot

Operation

Press the tailcap switch to turn the flashlight on/off.

Turn on the flashlight, and press the tailcap switch for more than one second to switch to the next primary output. The flashlight will remember the selected primary output when switched off.

Strobe modes: Each primary output corresponds with its strobe mode. Double click the tail button switch for the corresponding strobe mode when the flashlight is turned on. Another double click will return the light to the primary output mode. The 4 strobe modes each correspond to their primary output modes as follows: Turbo → Strobe, Low → Slow flash, Mid → SOS, High → Fast flash

Battery Replacement

Unscrew the tailcap to take out the battery magazine (Eight AA batteries divided into four individual packs of two), insert the batteries with the negative terminal towards the spring. After loading the batteries into the magazine, insert the magazine with its top spring towards LED assembly. Rotate the tailcap clockwise then depress tailcap switch to test.

Usage and Maintenance

- ◎ If you leave the flashlight unused for a couple of days, please unscrew the head 2.5 turns to prevent slow discharge of the batteries.
- ◎ When using eight batteries, insert the batteries according to position marked with (+) and (-) identifiers in the magazine.
- ◎ The TK40 can be powered by just four AA batteries for emergency use, but please do not use in Turbo mode with four batteries, or the batteries will be damaged by over heating. Please pay attention when installing the four AA batteries: There are two poles marked with (+) and (-) indicators in the magazine. The interface they formed divides the 8 AA battery magazine into two individual sets, install the 4 AA batteries in either set of the compartments according to the (+) and (-)

indicators of the magazine to light your flashlight, or it won't work.

- ◎ Please only use batteries of the same type, brand, capacity and state of charge, do not mix with used or other battery types, or leakage may result, even causing damage to the flashlight.
- ◎ The flashlight's automatic overheating protection may cause the light to flicker during prolonged running in a hot environment. Please do not stay on the turbo mode more than 15 minutes. If this occurs, please turn to a lower output mode to cool the flashlight. Normal operation will be restored once the light cools down.
- ◎ Please don't disassemble the sealed head, doing so can cause damage to the flashlight and will void the warranty.
- ◎ Please use batteries of high quality, or the flashlight could be damaged by electrolyte leakage or battery explosion.
- ◎ If the flashlight will not be used for a long time, please remove the batteries to avoid damage from battery leakage.
- ◎ Please replace the o-rings if they are damaged after a long period of use. O-rings should be regularly lubricated to prevent erosion of the rubber. Doing so will also keep the flashlight properly sealed against water.
- ◎ Please clean the contacts of your light from time to time, especially if the light flickers or doesn't light up. There may be several reasons for a flickering or not working light:
 - Reason A:** The batteries need replacing.
 - Solution:** Replace batteries (Please confirm the correct installation of anode and cathode).
 - Reason B:** The threads, PCB board contact or other contacts are dirty.
 - Solution:** Clean the contact points with an alcohol-soaked cotton swab. If the above methods don't work, please contact your distributor and refer to the warranty policy.

Product Warranty

We will replace products afflicted with manufacturing defects within 15 days of purchase and repair a light free of charge within 24 months of purchase if problems develop with normal use; if repair is required after 24 months from the date of purchase, we will charge for parts. The total repair fee is dictated by the cost of the replaced materials.

Warranty Card Registration

We kindly suggest that you register your guarantee card on the official website for Fenixlight Limited. You can get an extra six-month warranty period once you have successfully registered. What's more, you could take part in the lottery of questionnaire at the same time.

Warning

The TK40 is high-brightness lighting device and capable of causing eye damage, please avoid shining the light directly into the eyes.

Please insert the batteries according to the user manual, Incorrect positioning of the batteries may cause damage to the flashlight.

FENIXLIGHT LIMITED

Tel:+86-755-29631163/83/93 Fax:+86-755-29631181

<http://www.fenixlight.com>

E-mail:info@fenixlight.com

Address: 8/F,2nd Building,DongFangMing
Industrial Center,33rd District,Bao'an,
Shenzhen 518133,China