 


 


# 10 INCH WRITING TABLET, BLACK

## INSTRUCTION MANUAL

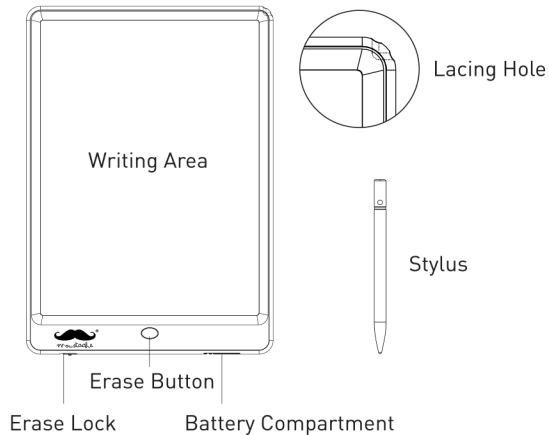 


### MAINTENANCE

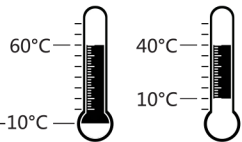 


#### CLEANING:

Please clean gently with soft, lint free cloth  
Storage Temperature: -10°C - 60°C  
Operating Temperature: 10°C - 40°C

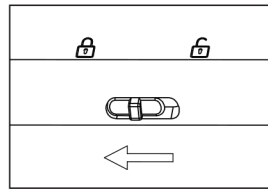

Turn off Erase Lock

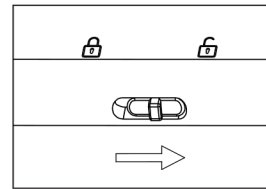 


Turn on Erase Lock

#### ATTENTION:

The Erase Lock is off in default.

1. When Erase Lock is off, the Erase Button is disable.
2. When Erase Lock is on, the Erase Button is activate.

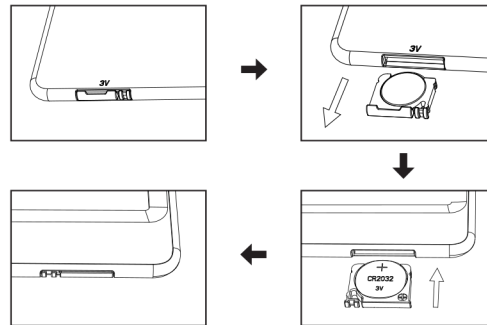

#### BATTERY REPLACEMENT:

1. Remove battery cover
2. Pull out battery
3. Replace the battery (Requires one CR2032[3V] battery)
4. Insert battery into board

#### ATTENTION:

To achieve better writing experience and to avoid scratching the surface, please use the matching stylus.



#### ⚠ WARNING:

- Please don't press too hard or write with objects that could damage screen.
- This Product cannot transfer data or images to or from any other device.
- Do not get product wet or submerge in water.
- Avoid continuous exposure to sunlight.

#### ⚠ WARNING:

- Small parts included, not suitable for kids under 3 years old.
- Do not disassemble the product.

For Troubleshooting, warranty and after-sales information please refer to our Customer Service at 1-866-979-7463.

#### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

