

HP12R-T

SEPARATION STYLE TRAIL RUNNING HEADLAMP



1300 LUMENS MAXIMUM
OUTPUT



200 METERS MAX BEAM
DISTANCE

WARNING

- Do NOT place this lamp in the reach of children!
- Do NOT shine the lamp directly into the eyes of anyone!
- Do NOT place lamp head near flammable objects, high temperatures can cause objects to overheat and become flammable/light!
- Do NOT use the lamp in inappropriate ways such as holding the unit in your mouth, doing so could cause serious personal injury or death if the headlamp or internal battery fails!
- This lamp will accumulate a significant amount of heat while operating, resulting in a high temperature of the lamp shell. Pay close attention to avoid burns.
- Turn off and lock the lamp or remove the battery to prevent accidental activation when the lamp is placed in a closed and flammable environment such as pockets and backpacks!
- The LEDs of this lamp are not replaceable; so the whole lamp should be replaced when any one of the LEDs reaches the end of its lifespan.

(ENGLISH) FENIX HP12R-T HEADLAMP

- 1300 lumens maximum output, 200 meters maximum beam distance.
- Utilizes one Luminus SST25, one Luminus SST20 CRB60, and two 2835 red LEDs, with a life span of 50,000 hours each.
- Cold white light, neutral white light, and red light support lighting needs in complex terrains and challenging weather conditions like rain, fog, and snow.
- Dual switches design allows for separate control of the white light and the neutral white light, both of which can be turned on simultaneously.
- Battery case features constant and flashing red light outputs for securing user safety during the night.
- Electronic lockout and physical lockout avoid accidental activation.
- Powered by a replaceable 4000mAh battery for longer runtime.
- Lamp head is constructed from rugged aluminum alloy material, ensuring reliability and excellent thermal performance.
- Perforated reflective headband - detachable and washable.
- IP66-rated protection and 2 meters impact resistance.
- Headlamp: 2.40" x 1.46" x 1.10"/61 x 37 x 28 mm.
- Battery case: 3.62" x 1.38" x 1.42"/92 x 35 x 36 mm.
- Weight: 7.02 oz/199 g(including battery).

OPERATING INSTRUCTIONS

On/off

On: with the lamp switched off, press and hold the switch ① or switch ② to turn on the white light or neutral white light.

Off: in any mode, press and hold for 0.5 seconds to turn off the lamp.

Mode Switching

The white light mode and the neutral white light mode are separately controlled by their respective switches.


With the lamp switched off, double click either switch to enter the red light mode.

Output Selection

In the white light mode, single click the white light switch to cycle through Low→Med→High→Turbo.

In the neutral white light mode, single click the neutral white light switch to cycle through Low→Med→High.

In the red light mode, single click either switch to select between Constant-on and SOS.

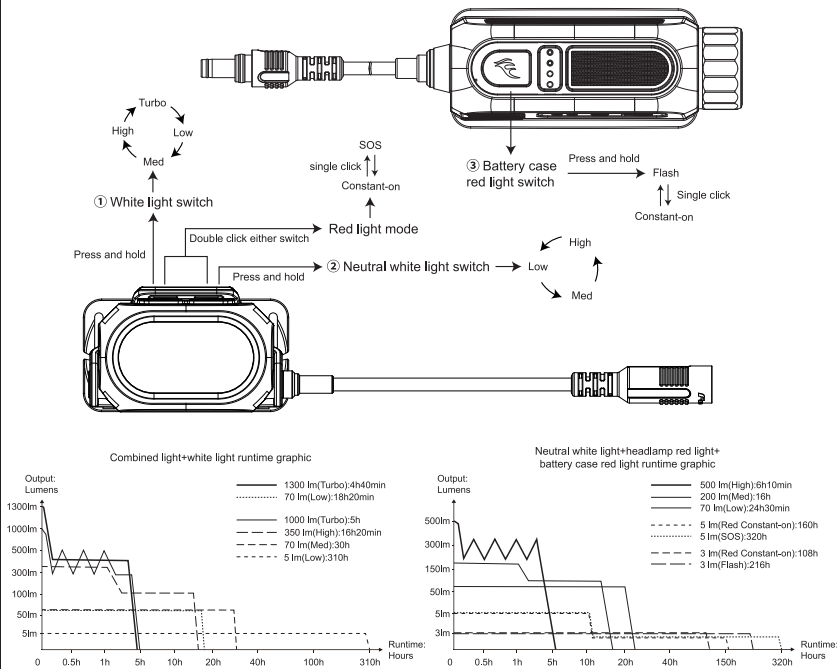

TECHNICAL PARAMETERS

ANSI/PLATO FL1	WHITE LIGHT+ NEUTRAL WHITE LIGHT		WHITE LIGHT					NEUTRAL WHITE LIGHT			HEADLAMP RED LIGHT		BATTERY CASE RED LIGHT	
	TURBO	LOW	TURBO	HIGH	MED	LOW		HIGH	MED	LOW	CONSTANT ON	SOS	CONSTANT ON	FLASH
3% OUTPUT	1300 lumens	70 lumens	1000 lumens	350 lumens	70 lumens	5 lumens		500 lumens	200 lumens	70 lumens	5 lumens	5 lumens	3 lumens	3 lumens
RUNTIME	4 hours 40 minutes	18 hours 20 minutes	5 hours*	16 hours 20 minutes	30 hours	310 hours		6 hours 10 minutes	16 hours	24 hours 30 minutes	160 hours	320 hours	108 hours	216 hours
DISTANCE	200 meters	47 meters	170 meters	98 meters	44 meters	12 meters		130 meters	79 meters	47 meters	4 meters	/	/	/
INTENSITY	9973 candela	564 candela	6967 candela	2412 candela	473 candela	36 candela		4290 candela	1552 candela	551 candela	5 candela	/	/	/
IMPACT RESISTANCE								2 meters						
WATERPROOF								IP66						

Note: According to the ANSI/PLATO FL1 standard, the above specifications are from the results produced by Fenix through its laboratory testing using one ARB-L18-4000 battery under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery used.

*The Turbo output is measured in total of runtime including output at reduced levels due to temperature or protection mechanism in the design.

Battery case red light mode

On/off: press and hold the battery case switch for 0.5 seconds.

Output selection: single click the battery case switch to select between Flash and Constant-on.

Intelligent Memory Circuit

The lamp automatically memorizes the last selected output of each mode. When turned on again, the previously used output of the currently selected mode will be recalled.

Lockout Function

Lock: with the lamp switched off, press and hold the two switches simultaneously for 3 seconds, the lamp will blink 4 times on the Low output of the white light to indicate locked status.

Unlock: with the lamp locked, press and hold the two switches simultaneously for 3 seconds, the lamp will blink 4 times and activate on the Low output of the white light to indicate the lamp is unlocked.

Note:

1. In locked status, the battery case can be operated. Still, other operations except for unlocking the headlamp will activate 4 blinks on the Low output of the white light to indicate locked status.

2. In locked status, re-inserting the battery will automatically unlock the headlamp.

BATTERY SPECIFICATIONS

Type	Dimensions	Nominal Voltage	Usability	
Fenix ARB-L18 Series	18650*	3.6 V	Recommended	✓✓
Non-rechargeable Battery (Li-Ion)	CR123A	3.0 V	Usable	✓
Fenix ARB-L16 Series	16340	3.6 V	Banned	X
Rechargeable Battery (Li-Ion)	18650	3.6 V	Caution*	!

LIGHTING FOR EXTREMES



FACEBOOK



WECHAT

"Follow" us for more information about Fenix.

FENIXLIGHT LIMITED

Tel: +86-755-29631163/83/93 Fax: +86-755-29631181

E-mail: info@fenixlight.com Web: www.fenixlight.com

Address: 2F/3F, West of Building A, Xinghong Technology Park, 111 Shuiku Road, Fenghuanggang Community, Xixiang Street, Bao'an District, Shenzhen City, Guangdong Province, China



61.149.221.142-A1-20250423

Three lights on: 80% - 50%
Two lights on: 50% - 40%
One light on: 40% - 20%
One light flashes: 20% - 1%

INTELLIGENT OVERHEAT PROTECTION

The lamp will accumulate a lot of heat when used at high output levels for extended periods. When the lamp reaches a temperature of 60°C/140°F or above, it will automatically step down a few lumens to reduce the temperature. When the temperature drops below 60°C/140°F, the lamp will gradually recall the preset output level.

LOW-VOLTAGE WARNING

When the voltage level drops below the preset level, the lamp is programmed to downshift to a lower brightness level until the lowest output of the currently selected mode is reached. When the white light and the neutral white light are turned on at the same time, the lamp will automatically turn off the neutral white light and keep the Low output of the white light on. However, if the neutral white light is turned on alone, the lamp will automatically turn off the neutral white light and turn on the Low output of the white light. When the voltage level is still too low in the lowest output, the headlamp will blink 3 times every 5 minutes on the Low output of the white light to remind users to replace or recharge the battery in a timely manner.

HEADBAND ASSEMBLY

Notice: The headband is factory assembled and ready to use right out of the package. Adjust the headband by sliding the buckle to the required length.

USAGE AND MAINTENANCE

- Disassembling the sealed head can cause damage to the lamp and void the warranty.
- Fenix recommends using an excellent quality battery.
- If the lamp will not be used for an extended period, remove the battery, or the lamp could be damaged by electrolyte leakage.
- Lock the lamp or take out the battery to prevent accidental activation during storage or transportation.
- Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.
- Recharge a stored lamp every four months to maintain the optimum performance of the battery.
- Poor battery level may cause the lamp to flicker, shine intermittently or even fail to illuminate, please replace the battery case in a timely manner. If this method doesn't work, please contact the distributor.

INCLUDED

Fenix HP12R-T headlamp, ARB-L18-4000 battery, USB Type-C charging cable, Spare O-ring, 2 x Cable clips, User manual, Warranty card