

Aside from SR 9 remote control, C 399 is also compatible with SR 10 remote control. SR 10 is a universal NAD remote control designed to operate several NAD models including the C 399.

The SR 10 remote control handset handles the key functions of the C 399. It can also control up to 4 devices. SR 10 will operate up to a distance of 23ft (7m). Two AA batteries should be fitted in the battery compartment at the rear of the remote control handset. Ensure that the batteries are correctly oriented and installed as indicated on the base of the battery compartment.

NOTES

- SR 10 function buttons not discussed, designated or highlighted indicate they are not applicable or functional for the particular device.
- The LED indicator between ON and OFF buttons will flash blue whenever a control button is pressed.

Select **AMP** from the DEVICE SELECTOR buttons to initiate the following C 399 remote control commands.

- 1 ON/OFF:** The SR 10 remote has separate ON and OFF buttons. Press ON to switch C 399 from Standby to operating mode. Press OFF to switch to Standby mode.
- 2 DEVICE SELECTOR:** A Device Selector button determines only what component the SR 10 will command; it does not perform any function on the C 399. Press desired Device Selector button for the applicable buttons to be directed to a "page" of commands relevant to the selected device. Upon selecting a Device, you can now press the corresponding SR 10 control buttons applicable for the selected Device.
- 3 MUTE:** Press **MUTE** button to temporarily switch OFF sound to the speakers and headphones. MUTE mode is indicated by "Mute" shown in the front panel display. Press **MUTE** again to restore sound. Adjusting the volume level via the SR 10 or the front panel volume knob will automatically release the mute function.
- 4 VOL [▲/▼]:** Press [▲/▼] button to increase or decrease the volume level. Release the button when the desired level is reached.
- 5 SOURCE [▲/▼]:** Toggle through Source input selections. If the optional MDC2 BluOS D module is installed, the Source selections will include Sources incorporated with the MDC2 BluOS D module.
- 6 EQ:** With optional MDC2 BluOS D installed and Dirac Live calibration completed, use EQ to select available saved Dirac Filter settings.
- 7 SPK A, SPK B:** The C 399 has two sets of SPEAKERS connections that are identical in function (parallel connection). Toggle either SPK A or SPK B to switch ON or OFF SPEAKERS output at the same time.
- 8 NAVIGATION AND ENTER BUTTONS:** Use [▲/▼/◀/▶] to go up, down, left or right menu options or selections. Press ENTER to complete a selection, procedure, sequence or other applicable functions.
- 9 SOURCE INPUT SELECTOR:** The numeric buttons allow for direct selection of Source input. Press corresponding number button to directly select Source.

1	Optical 1	6	Line 1
2	Optical 2	7	Line 2
3	Coaxial 1	8	HDMI eARC
4	Coaxial 2	9	Bluetooth
5	Phono		

IMPORTANT NOTE

There are 9 maximum Sources with discrete IR codes and they are mapped out to SR 10 remote control Source Input Selector buttons 1 – 9.

- If the optional MDC2 BluOS D module is installed, the chassis Bluetooth is disabled or becomes non-functional.
- With the optional MDC2 BluOS D installed, Source Input Selector "9" becomes assigned to "BluOS".

ADDENDUM SHEET FOR C 399

USING SR 10 WITH C 399

- USB and Bluetooth Sources that are incorporated in the MDC2 BluOS D are accessible via the BluOS App.
- Referring to below table, Optical 2 and Phono Sources were disabled under “MDC2 BluOS D Installed with some Sources disabled” column.

With Optical 2 and Phono Sources disabled, the Source Input Selector button allocations will shift to show only enabled Sources. Coaxial 1 will now move up or be assigned to “2”, Coaxial 2 shifted to “3”, Line 1 to “4” and so on.

- It is your prerogative which Sources to disable with the expectation that the Source Input Selector buttons will be re-assigned accordingly.

SR 10 CONTROL BUTTON (AMP MODE)	CORRESPONDING SOURCE		
	C 399 Default Settings	MDC2 BluOS D Installed	MDC2 BluOS D Installed with some Sources disabled
1	Optical 1	Optical 1	Optical 1
2	Optical 2	Optical 2	Coaxial 1
3	Coaxial 1	Coaxial 1	Coaxial 2
4	Coaxial 2	Coaxial 2	Line 1
5	Phono	Phono	Line 2
6	Line 1	Line 1	HDMI eARC
7	Line 2	Line 2	BluOS
8	HDMI eARC	HDMI eARC	Unassigned
9	Bluetooth	BluOS	Unassigned

10 : Toggle to vary brightness level of the front panel display - brighter, normal or dimmer.

11 With optional MDC2 BluOS D installed and while at BluOS Source, select

- ▶: Start playback; toggle to start or pause playback
- ◀◀: Skip back to the beginning of current song
- ▶▶: Skip forward to the next song

NOTE

Applicable only if optional MDC2 BluOS D is installed.

CD PLAYER CONTROL (applicable to most NAD CD Players): Select **CD** among the DEVICE SELECTOR buttons to gain access to the following applicable control buttons. Check the owner’s manual of your applicable NAD CD Player for control button compatibility.

ON/OFF: Press ON to switch CD player from Standby to operating mode. Press OFF to switch to Standby mode.

SOURCE : Press and hold to fast forward/reverse playback search

SPK A: Select CD as the active source

SPK B: Select USB as the active source

: Select Optical as the active source

MENU: Toggle to select desired SRC mode

NUMERIC BUTTONS (1-9, 0): Use the numeric buttons to directly key-in and select track number of desired song

: Select through folders

: Select through files

ENTER: Select desired folder or file

INFO: Show playback time and other display information

: Reduce, turn off or restore display brightness

: Open/close disc tray


▶: Start or pause playback

||: Pause playback temporarily

◀◀: Skip back to the beginning of current song

▶▶: Skip forward to the next song

■: Stop playback

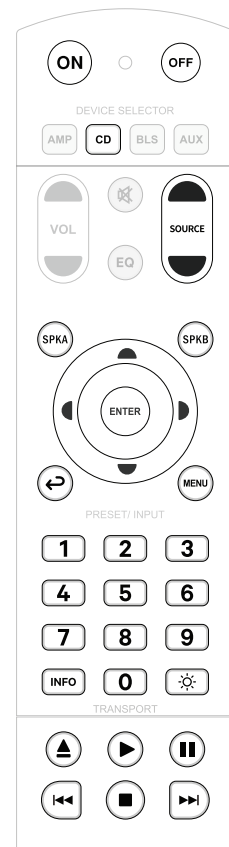


BluOS PLAYBACK CONTROLS (applicable to NAD products with installed MDC BluOS or MDC2 BluOS D module) Select **BLS** among the DEVICE SELECTOR buttons to use the following control buttons for BluOS playback.

IMPORTANT

- Ensure that your applicable NAD product is set to BluOS source.
- ► (PLAY) and II (PAUSE) function commands are not applicable for MDC2 BluOS D.

- : Start playback; toggle to start or pause playback
- II: Pause playback temporarily
- ◀◀: Skip back to the beginning of current song
- ▶▶: Skip forward to the next song

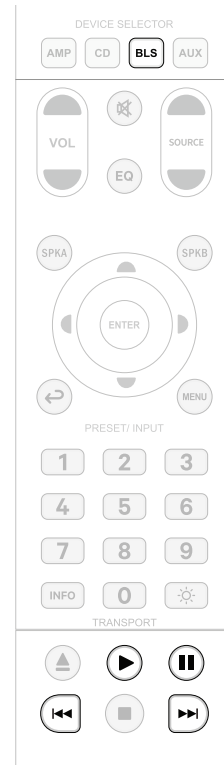

AUX PLAYER CONTROL (applicable to most NAD Tuners): Select **AUX** among the DEVICE SELECTOR buttons to gain access to the following applicable control buttons. The AUX device is defaulted to NAD Tuner device remote control codes.

SOURCE [▲/▼]: Step up or down between AM or FM frequencies

- ▲/▼: Step up or down between stored radio presets
- ◀/▶: Step up or down between AM or FM frequencies

ENTER: In AM/FM mode, toggle to select Preset or Tune mode. In DAB mode, press and hold to check signal strength.

NUMERIC BUTTONS (1-9, 0): Use the numeric buttons to directly key-in frequency number of desired AM or FM station

INFO: Toggle to display supplied information about the current radio station and applicable media being played. Some radio stations may not support any display information.

- : Toggle to select AM, FM, DAB or XM band (if applicable)
- ◀◀/▶▶: Step up or down between stored radio presets


USING THE SR 10 REMOTE CONTROL LIBRARY

The SR 10 can store a different library of default NAD codes for each of its DEVICE SELECTOR "pages." If the original default library does not control your NAD CD player, BluOS player or Tuner, follow the procedure below to change the library code. Refer also to the table below for a list of applicable NAD Library Codes with their corresponding NAD models.

LOAD ANOTHER LIBRARY CODE

Example: Load NAD DVD Player T 517 library codes to SR 10's **AUX** device.

- 1 Press and hold **AUX** in the DEVICE SELECTOR section of SR 10.
- 2 While holding down the device button **AUX**, press **2** and **2** using SR 10's numeric buttons. **22** is the corresponding library code for T 517.
- 3 Press **ENTER** while still holding down **AUX** device button. The **AUX** device selector will flash once to indicate that the library input is successful. Both **AUX** device selector and **ENTER** buttons can now be released.

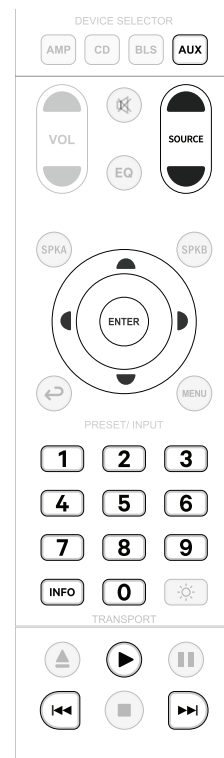

ADDENDUM SHEET FOR C 399

USING SR 10 WITH C 399

TABLE OF LIBRARY CODES APPLICABLE TO SR 10 REMOTE CONTROL



LIBRARY CODE	PRODUCT DESCRIPTION
10	Default library for "AMP" page
11	Zone 2
12	Default library for "AMP" page without discrete ON/OFF (toggle ON/OFF) buttons
20	Default library for "CD" page; C 515BEE, C 545BEE, C 565BEE
21	T 535, T 585, M55, DVD section of L 54, VISO TWO, VISO FIVE
22	T 513, T 514, T 515, T 517
23	T587
30	Default library for "BLS" page
31	IPD 2
40	Default library for "AUX" page. Loaded with Tuner default codes. Applicable also to Tuner section of C 725BEE, T 175, T 737, T 747, T 755, T 765, T 775, T 785
41	C 422, C 425
42	C 445
50	DAC

IMPORTANT

The SR 10 may not necessarily contain all the control buttons applicable for the above-mentioned NAD products. Use the prescribed remote control of the specific NAD product for a full complement of applicable remote control buttons.

RESET SR 10 TO ITS FACTORY DEFAULT SETTINGS

The SR 10 remote control can be restored to its factory default settings (including default libraries) by the following procedures.

- 1 Press and hold **ON** and  buttons.
- 2 As soon as **AMP** device button lights up, release hold of both **ON** and  buttons.
- 3 If the **CD** device button flashes twice, the SR 10 factory reset is completed.